

SpeechBill Call Accounting Solution

Web based call accounting solution which provides intelligent tracking of all voice communications. SpeechBill can generate detailed reports on telecom usage automatically or on demand and helps organization to calculate and disperse the cost to individuals, departments, cost-Centre's and customers. SpeechBill helps you to measure the performance of your telephone infrastructure and services using present and historical data.

General Prerequisites

Recommended Hardware Specification:


- Server/ PC specification and its availability.
 - Ensure it's having minimum Dual core processor/4 GB RAM/ 150 GB HDD
 - Windows OS 32 or 64 bit- Win 7 Pro, Win 8.1 Pro, Server 2008, Server 2012.
- Enable IIS on the server.
- Assign one Static IP to PC / Server.
- Provide the technical contact from your side to liaise with.
- Refer the below document for the configuration in Avaya System.

Following information to be collected from the Customer for the configuration of SpeechBill

- Extension Numbers.
- Name of User / Employee ,
- Company, Division, Department, Section to which each extension belongs to.
- Details of any specific Tariff plans available for them
- Trunk IDs as configured in Avaya system, and mention if the service providers are different (Du , Etisalat) for each trunk .

Avaya Communication Manager

This section provides the procedures for configuring CDR in Avaya Communication Manager. All configuration changes in Avaya Communication Manager are performed through the System Access Terminal (SAT). These steps describe the procedure used for the Avaya S8500 Server. All steps are the same for the other Avaya S8XXX servers unless otherwise noted. An Avaya Communication Manager is configured to generate and send the CDR records to the IP address of the SpeechBill server over a TCP socket connection. For this configuration, the CDR link is configured to originate from the Avaya S8500 Server (i.e., with node-name – “procr”) and terminates at the SpeechBill server.

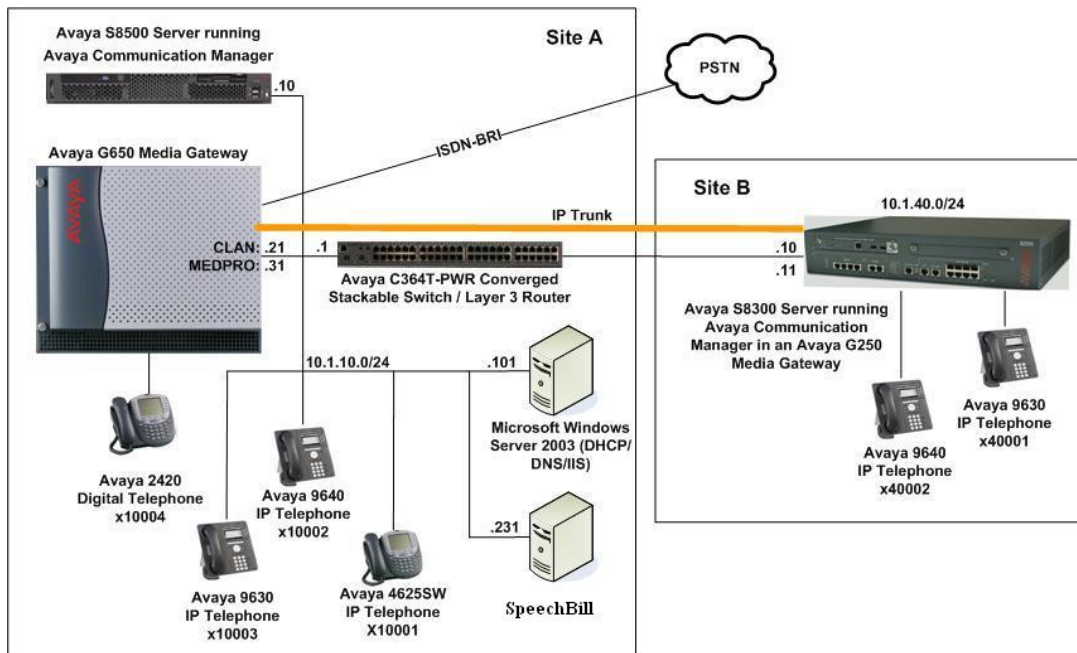

Configuration

Step	Description																																							
1.	<p>Use the change node-names ip command to add a new node name for SpeechBill</p> <pre>change node-names ip</pre> <p style="text-align: right;">Page 1 of 1</p> <table border="1"> <thead> <tr> <th colspan="2">IP NODE NAMES</th> </tr> <tr> <th>Name</th> <th>IP Address</th> </tr> </thead> <tbody> <tr> <td>default</td> <td>0.0.0.0</td> </tr> <tr> <td>procr</td> <td>10.1.10.10</td> </tr> <tr> <td>SpeechBill</td> <td>10.1.10.231</td> </tr> </tbody> </table>	IP NODE NAMES		Name	IP Address	default	0.0.0.0	procr	10.1.10.10	SpeechBill	10.1.10.231																													
IP NODE NAMES																																								
Name	IP Address																																							
default	0.0.0.0																																							
procr	10.1.10.10																																							
SpeechBill	10.1.10.231																																							
2.	<p>Use the change ip-services command to define the CDR link. To define a primary CDR link, the following information should be provided:</p> <ul style="list-style-type: none"> • Service Type: CDR1 [If needed, a secondary link can be defined by setting Service Type to CDR2.] • Local Node: procr • Local Port: 0 [The Local Port is fixed to 0 because Avaya Communication Manager initiates the CDR link.] • Remote Node: SpeechBill [The Remote Node is set to the node name previously defined in Step 1.] • Remote Port: 5025 [The Remote Port may be set to a value between 5000 and 64500 inclusive, and must match the port configured in SpeechBill settings] <pre>change ip-services</pre> <p style="text-align: right;">Page 1 of 4</p> <table border="1"> <thead> <tr> <th colspan="6">IP SERVICES</th> </tr> <tr> <th>Service Type</th> <th>Enabled</th> <th>Local Node</th> <th>Local Port</th> <th>Remote Node</th> <th>Remote Port</th> </tr> </thead> <tbody> <tr> <td>CDR1</td> <td></td> <td>procr</td> <td>0</td> <td>SpeechBill</td> <td>5025</td> </tr> </tbody> </table> <p>On Page 3 of the IP SERVICES form, disable the Reliable Session Protocol (RSP) for the CDR link by setting the Reliable Protocol field to n.</p> <pre>change ip-services</pre> <p style="text-align: right;">Page 3 of 4</p> <table border="1"> <thead> <tr> <th colspan="7">SESSION LAYER TIMERS</th> </tr> <tr> <th>Service Type</th> <th>Reliable Protocol</th> <th>Packet Timer</th> <th>Resp Timer</th> <th>Session Message</th> <th>Connect Cntr</th> <th>SPDU Connectivity Cntr</th> </tr> </thead> <tbody> <tr> <td>CDR1</td> <td>n</td> <td>30</td> <td>3</td> <td></td> <td>3</td> <td>60</td> </tr> </tbody> </table>	IP SERVICES						Service Type	Enabled	Local Node	Local Port	Remote Node	Remote Port	CDR1		procr	0	SpeechBill	5025	SESSION LAYER TIMERS							Service Type	Reliable Protocol	Packet Timer	Resp Timer	Session Message	Connect Cntr	SPDU Connectivity Cntr	CDR1	n	30	3		3	60
IP SERVICES																																								
Service Type	Enabled	Local Node	Local Port	Remote Node	Remote Port																																			
CDR1		procr	0	SpeechBill	5025																																			
SESSION LAYER TIMERS																																								
Service Type	Reliable Protocol	Packet Timer	Resp Timer	Session Message	Connect Cntr	SPDU Connectivity Cntr																																		
CDR1	n	30	3		3	60																																		

Configuration

Step	Description
3.	<p>Enter the change system-parameters cdr command to set the parameters for the type of calls to track and the format of the CDR data. The following settings are used during the compliance test.</p> <ul style="list-style-type: none"> • CDR Date Format: month/day • Primary Output Format: customized • Primary Output Endpoint: CDR1 <p>The remaining parameters define the type of calls that will be recorded and what data will be included in the record. See Reference [2] for a full explanation of each field. The test configuration used some of the more common fields described below.</p> <ul style="list-style-type: none"> • Use Legacy CDR Formats? n [Specify the use of the new Avaya Communication Manager 4.0.1 and later formats in the CDR records produced by the system.] • Intra-switch CDR: y [Allows call records for internal calls involving specific stations. Those stations must be specified in the INTRA-SWITCH-CDR form in Step 4.] • Record Outgoing Calls Only? n [Allows incoming trunk calls to appear in the CDR records along with the outgoing trunk calls.] • Outg Trk Call Splitting? y [Allows a separate call record for any portion of an outgoing call that is transferred or conferenced.] • Inc Trk Call Splitting? y [Allows a separate call record for any portion of an incoming call that is transferred or conferenced.]
	<pre> change system-parameters cdr Page 1 of 2 CDR SYSTEM PARAMETERS Node Number (Local PBX ID): 1 CDR Date Format: month/day Primary Output Format: customized Primary Output Endpoint: CDR1 Secondary Output Format: Use ISDN Layouts? n Enable CDR Storage on Disk? n Use Enhanced Formats? n Condition Code 'T' For Redirected Calls? n Use Legacy CDR Formats? n Remove # From Called Number? n Modified Circuit ID Display? y Intra-switch CDR? y Record Outgoing Calls Only? n Outg Trk Call Splitting? y Suppress CDR for Ineffective Call Attempts? y Outg Attd Call Record? y Disconnect Information in Place of FRL? n Interworking Feat-flag? n Force Entry of Acct Code for Calls Marked on Toll Analysis Form? n Calls to Hunt Group - Record: group-ext Record Called Vector Directory Number Instead of Group or Member? n Record Agent ID on Incoming? n Record Agent ID on Outgoing? y Inc Trk Call Splitting? y Inc Attd Call Record? n Record Non-Call-Assoc TSC? n Call Record Handling Option: warning </pre>
Speechlogix Technologies Pvt Ltd	Page 4 of 6

Configuration

Record Call-Assoc TSC?	n	Digits to Record for Outgoing Calls: dialed
Privacy - Digits to Hide:	0	CDR Account Code Length: 5

Step	Description
	<p>On Page 2 of the CDR SYSTEM PARAMETERS form, define the customized CDR format as shown.</p> <pre> change system-parameters cdr Page 2 of 2 CDR SYSTEM PARAMETERS Data Item - Length 1: date - 6 2: space - 1 3: time - 4 4: space - 1 5: sec-dur - 5 6: space - 1 7: cond-code - 1 8: space - 1 9: code-dial - 4 10: space - 1 11: code-used - 4 12: space - 1 13: dialed-num - 18 14: space - 1 15: calling-num - 15 16: space - 1 17: in-trk-code - 4 18: space - 1 19: auth-code - 7 20: space - 1 21: in-crt-id - 3 22: space - 1 23: out-crt-id - 3 24: space - 1 25: isdn-cc - 11 26: space - 1 27: ppm - 5 28: space - 1 29: acct-code - 15 30: space - 1 31: attd-console - 2 32: space - 1 33: vdn - 5 34: return - 1 35: line-feed - 1 36: - 37: - 38: - 39: - 40: - 41: - 42: - 43: - 44: - 45: - 46: - 47: - 48: - Record length = 130 </pre>
4.	<p>If the Intra-switch CDR field is set to y on Page 1 of the CDR SYSTEM PARAMETERS form, then use the change intra-switch-cdr command to define the extensions for which intra-switch call detail records will be generated. In the Extension field, enter the specific extensions whose usage will be tracked with the CDR records.</p> <pre> change intra-switch-cdr Page 1 of 3 INTRA-SWITCH CDR Assigned Members: 4 of 5000 administered Extension Extension Extension Extension 10001 10002 10003 10004 </pre>

Configuration

5.	<p>For each trunk group for which CDR records are desired, verify that CDR reporting is enabled. Use the change trunk-group <i>n</i> command, where <i>n</i> is the trunk group number, to verify that the CDR Reports field is set to y. This applies to all types of trunk groups.</p>
<pre> change trunk-group 2 Page 1 of 21 TRUNK GROUP Group Number: 2 Group Type: isdn CDR Reports: y Group Name: Singtel BRI Line 2 COR: 95 TN: 1 TAC: 702 Direction: two-way Outgoing Display? n Carrier Medium: PRI/BRI Dial Access? y Busy Threshold: 255 Night Service: 10004 Queue Length: 0 Service Type: public-ntwrk Auth Code? n TestCall ITC: rest Far End Test Line No: TestCall BCC: 4 </pre>	